

Auxiliary switch for damper actuators and rotary actuators

- one switch (SPDT)
- Adjustable switching point



0.15 kg

Technical data		
Electrical data	Auxiliary switch	1x SPDT, 0100%, adjustable
	Switching capacity auxiliary switch	1 mA3 A (0.5 A inductive), DC 5 VAC 250 V / 1 mA0.5 A (0.2 A inductive; L/R = 3.4 ms), DC 5 VDC 110 V
	Switching points auxiliary switch	Adjustable across the entire range of rotation 01 of the actuator. Presetting with scale possible.
	Connection auxiliary switch	Cable 1 m, 3 x 0.75 mm <sup>2</sup>
Safety data	Protection class IEC/EN	II, reinforced insulation
	Protection class UL	II, reinforced insulation
	Degree of protection IEC/EN	IP54
	Degree of protection NEMA/UL	NEMA 2
	Enclosure	UL Enclosure Type 2
	EMC	CE according to 2014/30/EU
	Low voltage directive	CE according to 2014/35/EU
	Certification IEC/EN	IEC/EN 60730-1 and IEC/EN 60730-2-14
	UL Approval	cULus according to UL60730-1A, UL60730-2-14 and CAN/CSA E60730-1
	Hygiene test	According to VDI 6022 Part 1 / SWKI VA 104-01, cleanable and disinfectable, low emission
	Type of action	Type 1.B
	Rated impulse voltage auxiliary switch	4 kV
	Pollution degree	3
	Ambient humidity	Max. 95% RH, non-condensing
	Ambient temperature	-3050°C [-22122°F]
	Storage temperature	-4080°C [-40176°F]
	Servicing	maintenance-free

Weight Weight



### Safety notes



- The device must not be used outside the specified field of application, especially not in aircraft or in any other airborne means of transport.
- Outdoor application: only possible in case that no (sea) water, snow, ice, insolation or aggressive gases interfere directly with the device and that it is ensured that the ambient conditions remain within the thresholds according to the data sheet at any time.
- Only authorised specialists may carry out installation. All applicable legal or institutional installation regulations must be complied with during installation.
- The device may only be opened at the manufacturer's site. It does not contain any parts that can be replaced or repaired by the user.
- · Cables must not be removed from the device.
- The device contains electrical and electronic components and must not be disposed of as household refuse. All locally valid regulations and requirements must be observed.

### **Product features**

### Operating mode

A carrier plate uses adaptation to make a positive fit on the shaft clamp (damper actuators) or on the position indication (rotary actuators) and transfers the position directly to the switching cams of the micro switches.

Switching points can be freely selected with an adjustment dial. The current switch position can be read off at any time.

#### Application

The auxiliary switch unit is used for signaling the position or for exercising switching functions in any given angle setting.

### Simple direct mounting


The auxiliary switches are attached directly by the shaft clamp (damper actuators) or on the position indication (rotary actuators). The guiding grooves between the housing and the switch ensure a tightly sealing fit.

## Accessories

#### Mechanical accessories

Description	Туре
Adapter for auxiliary switch and feedback potentiometer, Multipack 20	Z-SPA
pcs.	

## **Electrical installation**

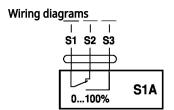






Cable colours: S1 = violet

S2 = red

S3 = white



# Operating controls and indicators

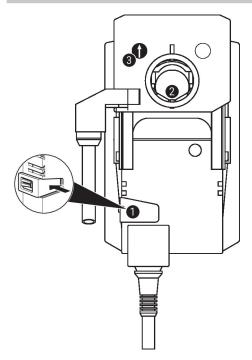

## **Auxiliary switch settings**



**Note:** Perform settings on the auxiliary switch only in deenergised state.

For the auxiliary switch position settings, carry out points 1 to 3 successively.

### Manual override button

Holding button pressed down (or fix): Gear train disengages. Manual override is possible.

## 2 Shaft clamp

Turn the shaft clamp of the actuator into the desired switching position of the auxiliary switch

## 3 Auxiliary switch - 1

Turn rotary knob until the arrow points to the vertical line.

Turn the shaft clamp 2 and consider the arrow direction of the auxiliary switch rotary knob at the same time.

The arrow direction always indicates the switching position (S1-S2 or S1-S3). If the auxiliary switch should switch in the opposite direction, rotate the auxiliary switch

rotary knob by 180°. Alternatively the switching position can be checked with a continuity tester on the cable of the auxiliary switch.

Release (or disengage) button 1.



# **Dimensions**

