

Configurable rotary actuator fail-safe for adjusting dampers in technical building installations

- Air damper size up to approx. 4 m²
- Torque motor 20 Nm
- Nominal voltage AC/DC 24 V
- Control modulating 2...10 V variable
- Position feedback 2...10 V variable



Technical data

| | | |
|-----------------------------------|---|---|
| Electrical data | Nominal voltage | AC/DC 24 V |
| | Nominal voltage frequency | 50/60 Hz |
| | Nominal voltage range | AC 19.2...28.8 V / DC 21.6...28.8 V |
| | Power consumption in operation | 8.5 W |
| | Power consumption in rest position | 3.5 W |
| | Power consumption for wire sizing | 11 VA |
| | Connection supply / control | Cable 1 m, 4x 0.75 mm ² |
| | Parallel operation | Yes (note the performance data) |
| Functional data | Torque motor | 20 Nm |
| | Torque fail-safe | 20 Nm |
| | Operating range Y | 2...10 V |
| | Input impedance | 100 kΩ |
| | Operating range Y variable | Start point 0.5...30 V End point 2.5...32 V |
| | Operating modes optional | Open/close 3-point (AC only) Modulating (DC 0...32 V) |
| | Position feedback U | 2...10 V |
| | Position feedback U note | Max. 0.5 mA |
| | Position feedback U variable | Start point 0.5...8 V End point 2.5...10 V |
| | Position accuracy | ±5% |
| | Direction of motion motor | selectable with switch L/R |
| | Direction of motion variable | electronically reversible |
| | Direction of motion fail-safe | selectable by mounting L/R |
| | Manual override | by means of hand crank and locking switch |
| | Angle of rotation | Max. 95° |
| | Angle of rotation note | adjustable starting at 33% in 2.5% steps (with mechanical end stop) |
| | Running time motor | 150 s / 90° |
| | Running time motor variable | 70...220 s |
| Running time fail-safe | <20 s @ -20...50°C / <60 s @ -30°C | |
| Adaptation setting range | manual | |
| Adaptation setting range variable | No action Adaptation when switched on Adaptation after using the hand crank | |

Technical data

| | | | |
|--|---------------------------|---|--------------------------------------|
| Functional data | Override control | MAX (maximum position) = 100% MIN (minimum position) = 0% ZS (intermediate position, AC only) = 50% | |
| | Override control variable | MAX = (MIN + 32%)...100% MIN = 0%...(MAX - 32%) ZS = MIN...MAX | |
| | Sound power level, motor | 40 dB(A) | |
| | Mechanical interface | Universal shaft clamp 10...25.4 mm | |
| | Position indication | Mechanical | |
| | Service life | Min. 60'000 fail-safe positions | |
| | Safety data | Protection class IEC/EN | III, Safety Extra-Low Voltage (SELV) |
| | | Power source UL | Class 2 Supply |
| Degree of protection IEC/EN | | IP54 | |
| Degree of protection NEMA/UL | | NEMA 2 | |
| Enclosure | | UL Enclosure Type 2 | |
| EMC | | CE according to 2014/30/EU | |
| Certification IEC/EN | | IEC/EN 60730-1 and IEC/EN 60730-2-14 | |
| UL Approval | | cULus according to UL60730-1A, UL60730-2-14 and CAN/CSA E60730-1 The UL marking on the actuator depends on the production site, the device is UL-compliant in any case | |
| Type of action | | Type 1.AA | |
| Rated impulse voltage supply / control | | 0.8 kV | |
| Pollution degree | | 3 | |
| Ambient humidity | | Max. 95% RH, non-condensing | |
| Ambient temperature | | -30...50°C [-22...122°F] | |
| Storage temperature | | -40...80°C [-40...176°F] | |
| Servicing | | maintenance-free | |
| Weight | Weight | 2.2 kg | |

Safety notes


- This device has been designed for use in stationary heating, ventilation and air-conditioning systems and must not be used outside the specified field of application, especially in aircraft or in any other airborne means of transport.
- Outdoor application: only possible in case that no (sea) water, snow, ice, insolation or aggressive gases interfere directly with the device and that it is ensured that the ambient conditions remain within the thresholds according to the data sheet at any time.
- Only authorised specialists may carry out installation. All applicable legal or institutional installation regulations must be complied with during installation.
- The device may only be opened at the manufacturer's site. It does not contain any parts that can be replaced or repaired by the user.
- Cables must not be removed from the device.
- To calculate the torque required, the specifications supplied by the damper manufacturers concerning the cross-section and the design, as well as the installation situation and the ventilation conditions must be observed.
- The device contains electrical and electronic components and must not be disposed of as household refuse. All locally valid regulations and requirements must be observed.

Product features

| | |
|---------------------------------------|---|
| Operating mode | <p>The actuator moves the damper to the operating position at the same time as tensioning the return spring. The damper is turned back to the fail-safe position by spring force when the supply voltage is interrupted.</p> <p>The actuator is connected with a standard control signal of 0...10 V and drives to the position defined by the control signal. Measuring voltage U serves for the electrical display of the damper position 0...100% and as control signal for other actuators.</p> |
| Parametrisable actuators | The factory settings cover the most common applications. Single parameters can be modified with the Belimo service tools MFT-P or ZTH EU. |
| Simple direct mounting | Simple direct mounting on the damper shaft with a universal shaft clamp, supplied with an anti-rotation device to prevent the actuator from rotating. |
| Manual override | By using the hand crank the damper can be actuated manually and engaged with the locking switch at any position. Unlocking is carried out manually or automatically by applying the operating voltage. |
| Adjustable angle of rotation | Adjustable angle of rotation with mechanical end stops. |
| High functional reliability | The actuator is overload protected, requires no limit switches and automatically stops when the end stop is reached. |
| Home position | <p>The first time the supply voltage is switched on, i.e. at the time of commissioning, the actuator carries out a synchronisation. The synchronisation is in the home position (0%).</p> <p>The actuator then moves into the position defined by the control signal.</p> |
| Adaptation and synchronisation | <p>An adaptation can be triggered manually by pressing the "Adaptation" button or with the PC-Tool. Both mechanical end stops are detected during the adaptation (entire setting range). Automatic synchronisation after actuating the hand crank is programmed. The synchronisation is in the home position (0%).</p> <p>The actuator then moves into the position defined by the control signal.</p> <p>A range of settings can be adapted using the PC-Tool (see MFT-P documentation)</p> |

Accessories

| Electrical accessories | Description | Type |
|-------------------------------|--|-------------|
| | Auxiliary switch 2x SPDT | S2A-F |
| | Feedback potentiometer 1 kΩ | P1000A-F |
| | Signal converter voltage/current 100 kΩ 4...20 mA, Supply AC/DC 24 V | Z-UIC |
| | Positioner for wall mounting | SGA24 |
| | Positioner for built-in mounting | SGE24 |
| | Positioner for front-panel mounting | SGF24 |
| | Positioner for wall mounting | CRP24-B1 |
| Mechanical accessories | Description | Type |
| | Shaft extension 240 mm ø20 mm for damper shaft ø8...22.7 mm | AV8-25 |
| | End stop indicator | IND-AFB |
| | Shaft clamp reversible, for central mounting, for damper shafts ø12.7 / 19.0 / 25.4 mm | K7-2 |
| | Ball joint suitable for damper crank arm KH8 / KH10 | KG10A |
| | Ball joint suitable for damper crank arm KH8 | KG8 |
| | Damper crank arm Slot width 8.2 mm, clamping range ø10...18 mm | KH8 |
| | Actuator arm, for 3/4" shafts, clamping range ø10...22 mm, Slot width 8.2 mm | KH-AFB |
| | Form fit insert 10x10 mm, Multipack 20 pcs. | ZF10-NSA-F |
| | Form fit insert 12x12 mm, Multipack 20 pcs. | ZF12-NSA-F |
| | Form fit insert 15x15 mm, Multipack 20 pcs. | ZF15-NSA-F |
| | Form fit insert 16x16 mm, Multipack 20 pcs. | ZF16-NSA-F |

Accessories

| | Description | Type |
|-------|---|-----------|
| | Mounting kit for linkage operation for flat and side installation | ZG-AFB |
| | Baseplate extension | Z-SF |
| | Anti-rotation mechanism 230 mm, Multipack 20 pcs. | Z-ARS230L |
| | Hand crank 63 mm | ZKN2-B |
| Tools | Description | Type |
| | Service tool, with ZIP-USB function, for parametrisable and communicative Belimo actuators, VAV controller and HVAC performance devices | ZTH EU |
| | Belimo PC-Tool, Software for adjustments and diagnostics | MFT-P |
| | Adapter for Service-Tool ZTH | MFT-C |
| | Connecting cable 5 m, A: RJ11 6/4 ZTH EU, B: 6-pin for connection to service socket | ZK1-GEN |
| | Connecting cable 5 m, A: RJ11 6/4 ZTH EU, B: free wire end for connection to MP/PP terminal | ZK2-GEN |

Electrical installation




Supply from isolating transformer.
Parallel connection of other actuators possible. Observe the performance data.

Wire colours:


- 1 = black
- 2 = red
- 3 = white
- 5 = orange

Wiring diagrams

AC/DC 24 V, modulating

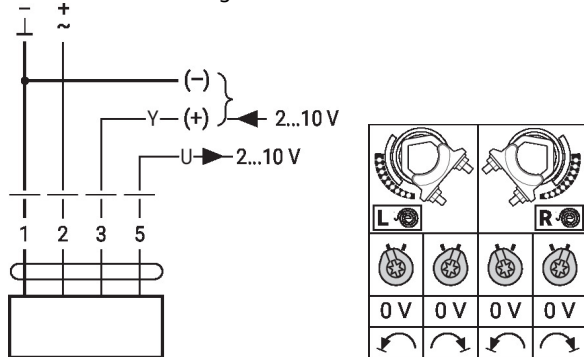

Wiring diagram piggy-back operation (mechanically coupled actuators)

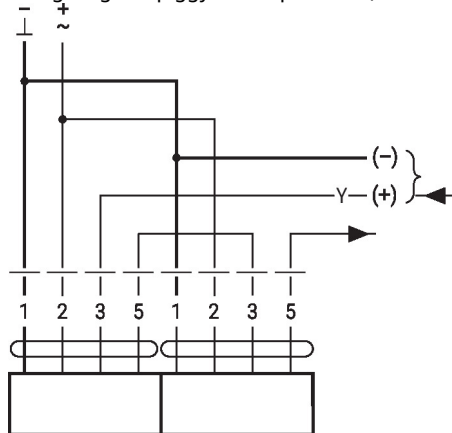


- Max. 2 actuators in primary/secondary operation
- Primary/secondary operation is permitted only on one fixed shaft or on two mechanically coupled shafts
- The programming of the primary actuator is adopted by the secondary actuator


Functions

Functions with basic values (conventional mode)


Override control with AC 24 V with relay contacts

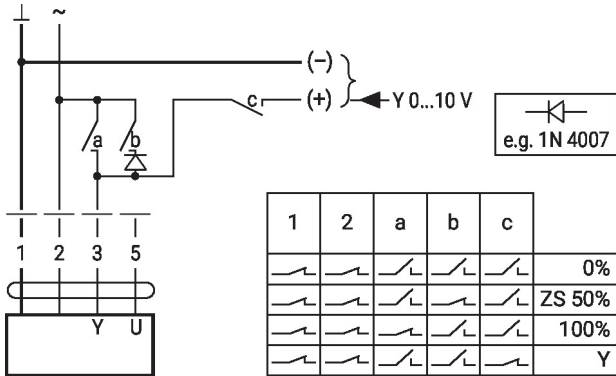


Override control with AC 24 V with rotary switch

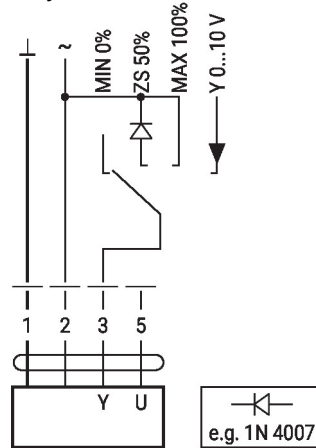


Control remotely 0...100% with positioner SG..

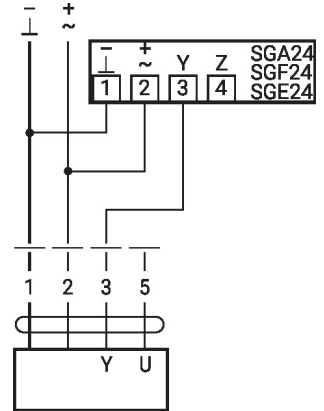

Minimum limit with positioner SG..

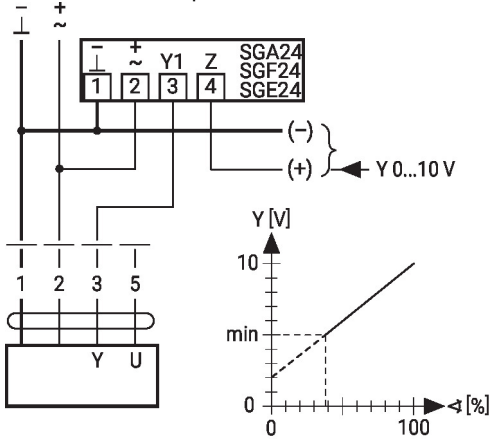

Control with 4...20 mA via external resistor

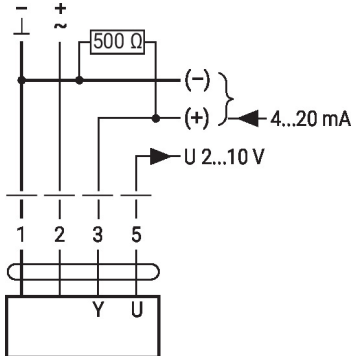

Caution:


The operating range must be set to DC 2...10 V.

The 500 Ohm resistor converts the 4...20 mA current signal to a voltage signal DC 2...10 V.

Functions

Functions with basic values (conventional mode)

Functional check

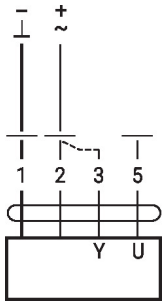


Procedure


1. Connect 24 V to connections 1 and 2
2. Disconnect connection 3:
 - With direction of rotation 0: Actuator rotates to the left
 - With direction of rotation 1: Actuator rotates to the right
3. Short-circuit connections 2 and 3:
 - Actuator runs in opposite direction

Functions with specific parameters (Parametrisation necessary)


Override control and limiting with AC 24 V with relay contacts

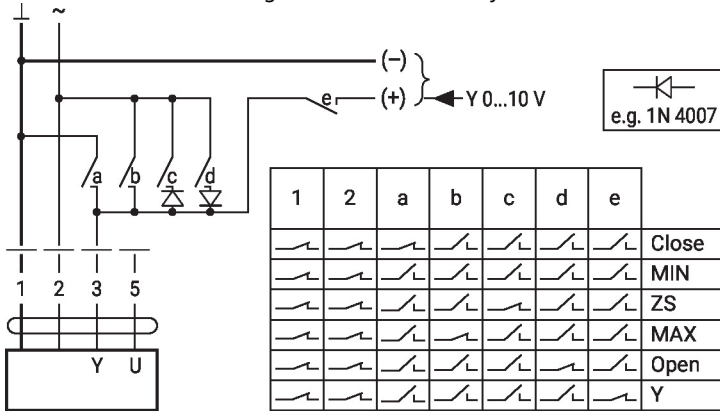


Control open/close

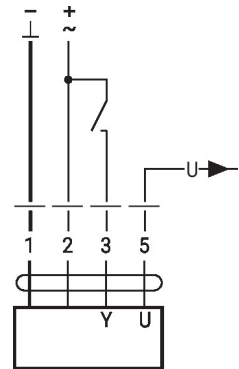


Override control and limiting with AC 24 V with rotary switch

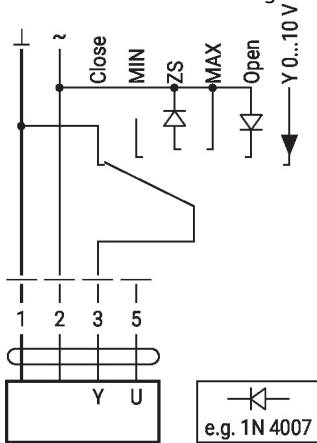

Control 3-point with AC 24 V

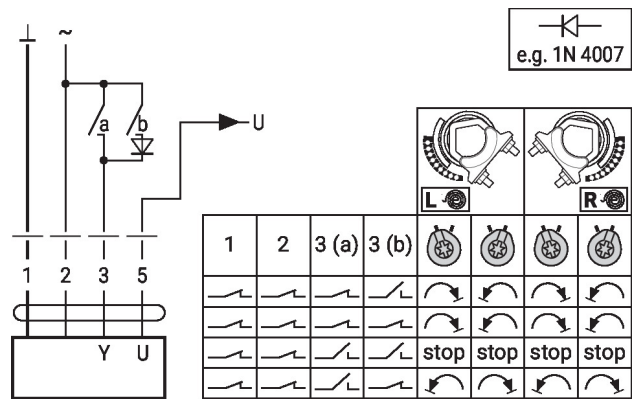

Operating controls and indicators

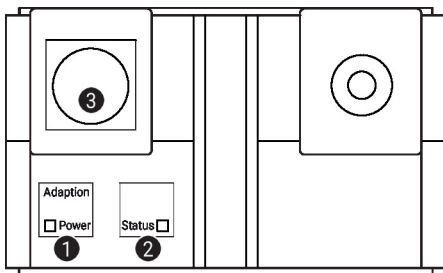
1 Membrane key and LED display green

Off: No power supply or malfunction

On: In operation

Press button: Triggers angle of rotation adaptation, followed by standard mode

2 Membrane key and LED display yellow

Off: Standard mode

On: Adaptation or synchronisation process active

Press button: No function

3 Service plug

For connecting parametrisation and service tools


Operating elements

The manual override, locking switch and direction of rotation switch elements are available on both sides

Service

Tool connection The actuator can be parametrised by ZTH EU via the service socket. For an extended parametrisation the PC tool can be connected.

Connection ZTH EU / PC-Tool

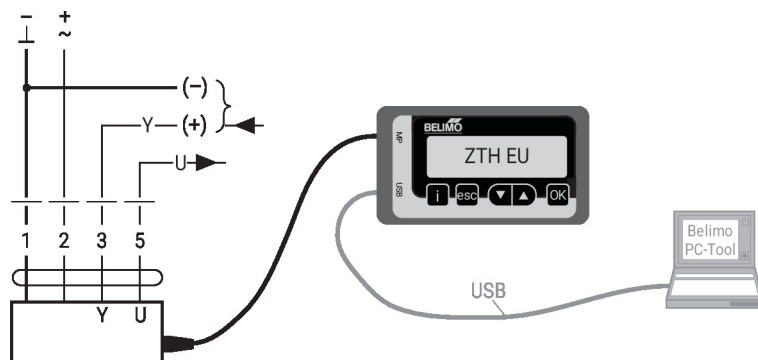

Dimensions

Spindle length

| | | |
|--|--|---------|
| | | Min. 85 |
| | | Min. 15 |

Clamping range

| | | | |
|--|-----------|---------|-----------|
| | | | |
| | 10...22 | 10 | 14...25.4 |
| | | | |
| | 19...25.4 | 12...18 | |

